



QUICK START GUIDE


MAYA Moissanite Tester

Model No.: GEM-0019-01


V-01A

IN THE BOX:

1x MAYA

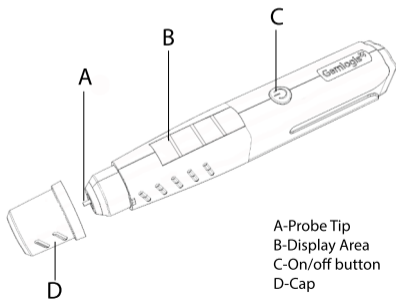

1x Universal Charger

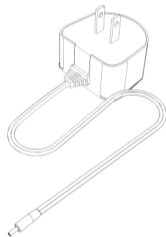


Note:

Charge device for at least 1 hour before using it for the first time.


HOW TO OPERATE:

①

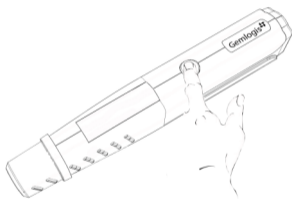

Press the on/off button to power on device.
To power off the device, press and hold the on/off button for 2 secs.


②

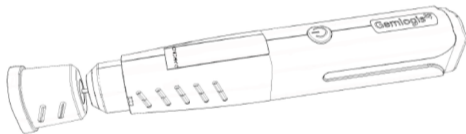

Press the probe tip perpendicularly onto the test disc of the cap. If the green LED lights up, it shows that the device is working properly. If the blue LED lights up, it means that the device is faulty.

FOR TESTING MOUNTED JEWELLERY:


3

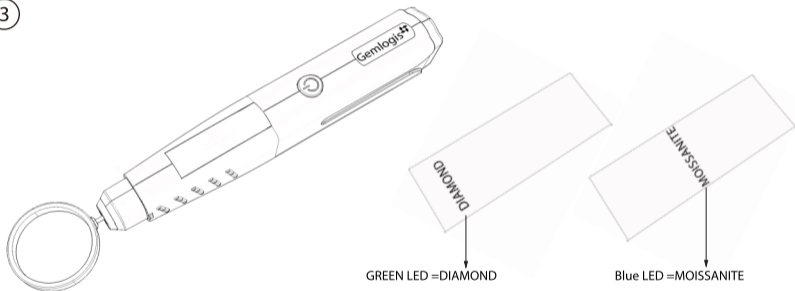

Press the probe tip perpendicularly onto the table centre of the gemstone in the ring. If the green LED lights up, it shows that the gemstone is a diamond. If the blue LED lights up, it shows that the gemstone is a moissanite.

FOR TESTING ON LOOSE STONE:

4

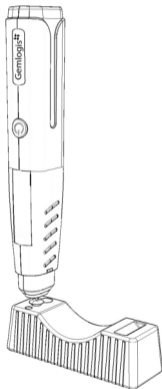

GREEN LED = DIAMOND




Blue LED = MOISSANITE

Place the loose stone on the metal rest pit (Sold together with Maya). Press the probe tip perpendicularly onto the table centre of the loose stone. If the green LED lights up, it shows that the gemstone is a diamond. If the blue LED lights up, it shows that the gemstone is a moissanite.

BATTERY CONDITION:

5

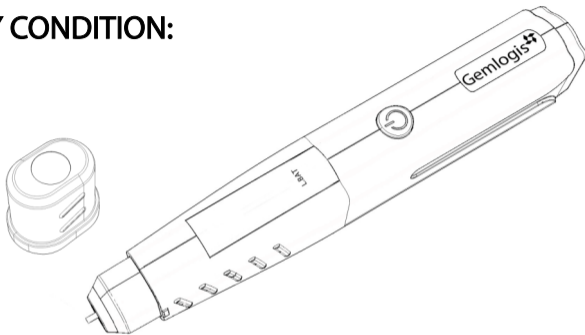

If the red LED lights up, it means that the battery level is low.
Connect the battery charger to charge the battery.

PRODUCT FEATURES:

- No warm-up time required.
- Ergonomic design, light and portable for convenience.
- Specially designed to identify Moissanite including the new F1 Moissanite.
- Test Moissanite as small as 0.05ct.
- Automatic power down to optimize battery life span. The tester goes into sleep mode after 10 minutes of inactivity.

Product Dimension (mm):	161.1L x 23.7W x 28.9H
Weight (g):	65.3±5g
Battery Info:	YT751448(Lithium-Polymer Battery 450 mAh)
Operating Time (Hrs):	10hrs non-stop. 1440hrs standby

IMPORTANT NOTE: The MAYA should only be used after the CIEL ONE/ MANTIS test has given a MOISSANITE indication.

DISCLAIMERS & LIMITATION OF LIABILITY:

Due to continuous product enhancement, Jubilee Diamond Instrument reserves the right to revise all documents including the right to make changes to the handbook without prior notice and without obligation to notify any person of such revisions or changes. Users are advised to check Gemlogis' website for latest updates.
<http://www.gemlogis.com>

To the maximum extent permitted by applicable law, under no circumstances shall Jubilee Diamond Instrument, its manufacturer or any of its subsidiaries, licensors, distributors, reseller, servant and/or agent be liable for any special, incidental, consequential or indirect damages howsoever caused.

The product referred to in this manual is provided and/or sold on 'as is' basis. Except as required by application law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

For further support: support@jubileediamond.com.hk

A product of Jubilee Diamond Instrument Ltd. Designed in Singapore. Produced in China.

TERMS & WARRANTY:

- Gemlogis MAYA Tester is covered by a 12-month Factory Warranty.
- Defects in material and workmanship are covered under this warranty.
- Warranty will be voided by unauthorized repair, modification, tempering, accident damage, negligence or improper use.
- Warranty period takes effect from the date of original purchase.
- Original invoice must be shown in order to exercise the terms of factory warranty.
- In the event that this model is no longer available or has been discontinued but warranty coverage is applicable, at the sole discretion of the manufacturer, an equivalent device may be substituted in place of the defective model.
- The purchaser shall incur the cost for postage insurance and handling for all warranty covered and non-warranty covered repairs.
- Under no circumstances shall the manufacturer, Jubilee Diamond Instrument Ltd, or any of its subsidiaries, distributors or third parties be liable for any direct or indirect damages, resulting from the use of this instrument.

 www.gemlogis.com

Email: support@jubileediamond.com.hk